

The electricity sub boards are located in the tool cupboard behind the front door

ELECTRICITY SUB BOARD # 1 index to switches

1. Heating bedrooms 4 & 5 (3kw)
2. Heating games room & bedroom 7 (downstairs) (3.6 kw)
3. Heating lounge (3kw)
4. Heating - drying room (3kw)
5. Heating bedrooms 1,2 &3 (3kw)
6. Heating bathrooms & hall (3.2kw)
7. unknown (3kw)
8. unknown
9. Heating kitchen & dining room (2kw0)
10. Heating - glass/metal panel in dining room (1kw)

ELECTRICITY SUB BOARD #2 index to switches

1. Stove, oven & cooktop
2. unknown
3. disconnected
4. Bedrooms & bathrooms power
5. Bedrooms lights
6. Disconnected
7. Lounge & kitchen power
8. Lounge & kitchen lights
9. Drying room & workshop power
10. Ground floor & refrigerator power
11. Lights ground floor & emergency lights

NOTE PLEASE: The main electricity switchboard is located on the front exterior wall of the lodge adjacent to the games room exterior door. Please refer to separate instructions.

OPENING LODGE - electricity:

1. Turn on main electricity switchboard – see separate instructions – copy inside main electricity switch board box.
2. Turn on circuit breakers on electricity sub board #2 – switches 1 to 9 (#1 is never turned off).
3. Check that circuit breakers on electricity sub board #1 are all on – if not, then turn on switches 1 to 7.

CLOSING LODGE - electricity:

1. Turn off circuit breakers 2 to 9 on electricity sub board #2 (#1 is never to be turned off)
2. Turn off switches on main board – refer instructions inside main electricity board box