

19 GAS

A. GAS BOTTLES

The bottles are located outside at the right side of the entrance. There are 2 bottles which are linked and have a toggle valve (Blue) which is located on the wall behind the bottles.

WHEN GAS IN THE LODGE (GAS FIRE OR COOKTOP) RUNS OUT, ROTATE THE TOGGLE VALVE 180 DEGREES (OPPOSITE DIRECTION) TO OPEN GAS IN THE SPARE BOTTLE.

After you have changed over the bottles please call Hans Oversnow IMMEDIATELY on 6457 5334 and ask for a gas delivery to Lampada.


If there is a problem with Hans then call ELGAS Cooma on 6452-1440 and they will co-ordinate a delivery. Then contact the Booking officer John Kraefft 99771325 or 0405370872 to advise that we have requested a gas delivery.

Outside of ski season call ELGAS.

B. GAS HEATER/ FIRE

This heater is set on MANUAL mode and the room temperature is controlled by you.

The heater is NOT INSTANT RESPONSE to your request be patient and it will happen. (May take up to 3 or 4 minutes for initial startup.)

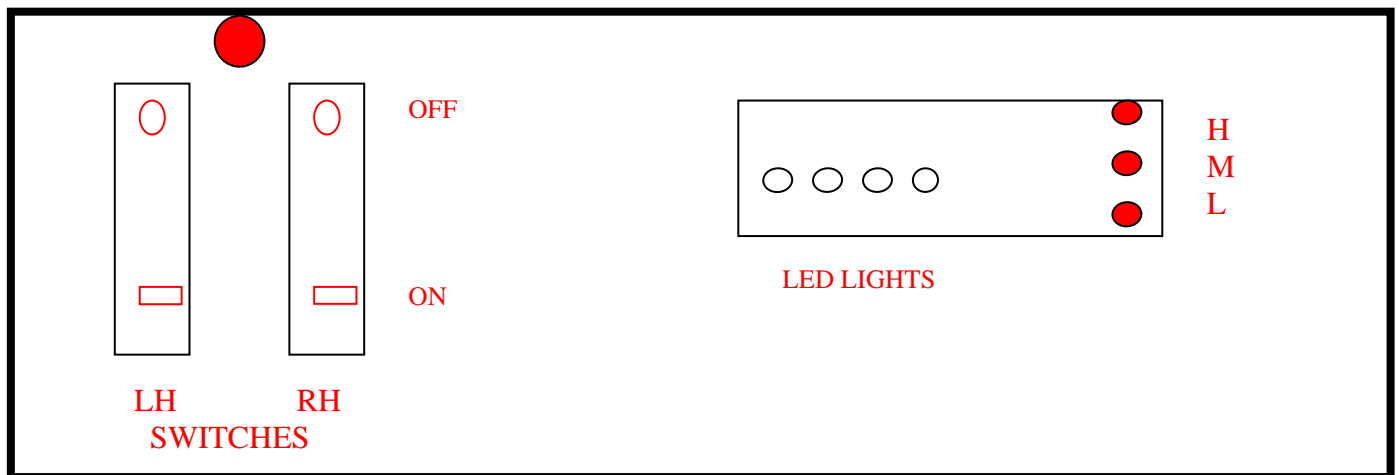

To operate on HIGH – switch BOTH switches on (down) – heater will start up in a few minutes.

To operate on MEDIUM – switch RIGHT HAND switch on (down).

To operate on LOW – switch LEFT HAND switch on (down).

VERY IMPORTANT----- To change from LOW to MEDIUM or MEDIUM back to LOW you must switch the other switch on FIRST so both switches are on THEN turn off the switch you don't require. Should this not be done the heater may require reprogramming.

PLEASE TURN OFF GAS FIRE BEFORE GOING TO BED

THE CONTROL PANELS ON THE WALL BESIDE THE DOOR TO THE HALLWAY HAVE NOTHING TO DO WITH THE GAS HEATER.

C. GAS COOKTOP & GAS OVEN – see makers' manuals in the blue folder.