


MAIN SWITCHBOARD

Located on outside wall adjacent to games room external door

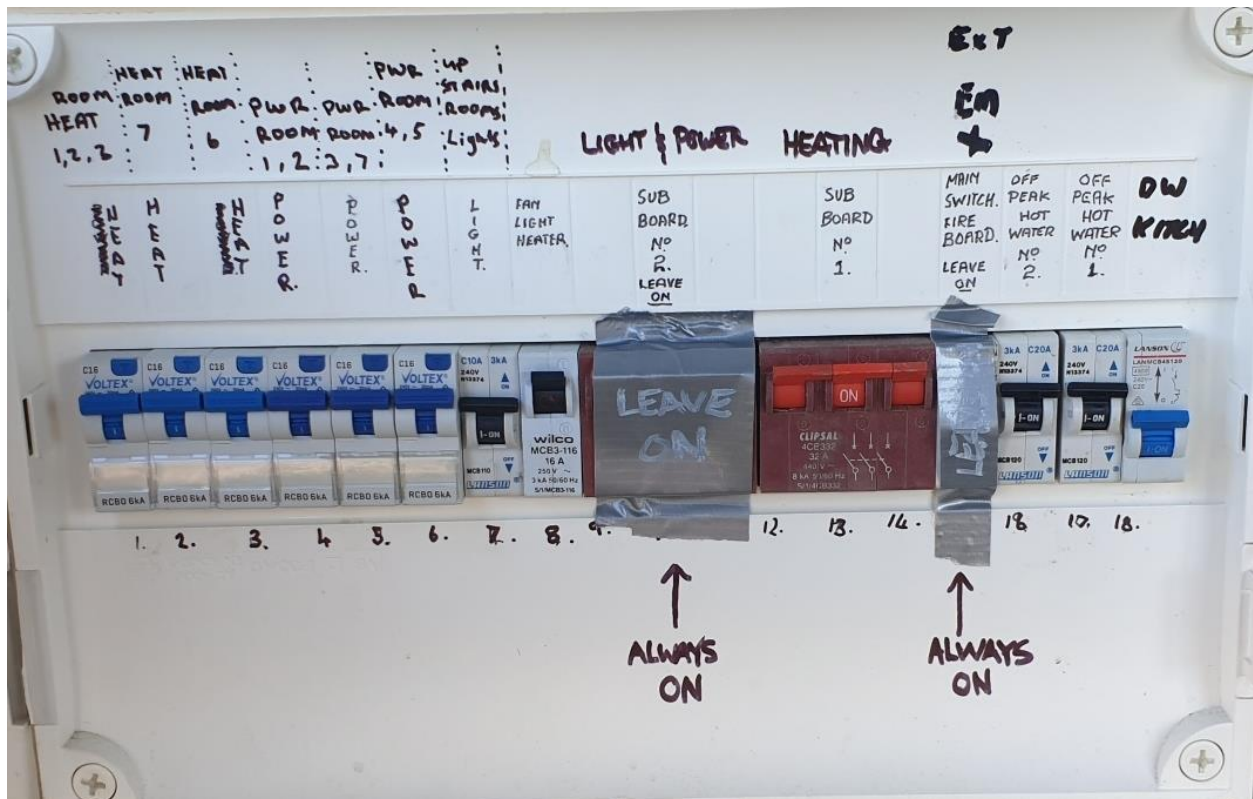

OPENING LODGE

1. Turn on all switches on the Main Switchboard. Ensure all switches are Up
2. Turn on Circuit Breakers on Sub boards #1 & #2 both located inside the lodge in the tool store cupboard behind the front entry door. Refer to the instructions in Section 7.
3. (Turn water on in laundry as per instruction sheets 10 & 11.)

CLOSING LODGE

1. Turn all circuit breaker switches off (Down is Off) - **EXCEPT** Circuit Breakers (9, 10, 11) that serve Sub board #2 (and the associated emergency lighting system) , and **Circuit Breaker 15** serving the Fire panel, which are always left **ON**.