

GAS SYSTEM

OPENING THE LODGE

The bottles are located outside at the right side of the entrance. There are 2 bottles which are linked and have a toggle valve (Blue) which is located on the wall behind the bottles.

Open the lid on top of the bottles (the hinges are on the side away from the wall). Open one gas valve (if not already on) by turning anticlockwise. You only need to turn one gas bottle on. Looking at the small blue toggle valve between the tanks, the blue toggle valve handle should point to the gas tank which has its valve open.

You can check the gauges on top of each tank which indicate the percentage full for each tank.

CLOSING THE LODGE

On leaving the Lodge, close down any open valves on the gas tanks.

GAS BOTTLE EMPTY

WHEN GAS IN THE LODGE (GAS FIRE OR COOKTOP) RUNS OUT, ROTATE THE TOGGLE VALVE 180 DEGREES (OPPOSITE DIRECTION) TO OPEN GAS IN THE SPARE BOTTLE.

After you have changed over the bottles please call 4Site IMMEDIATELY on 02 6412 2244 and ask for a gas delivery to Lampada.

If there is a problem with 4Site then call ELGAS Cooma on 6452-1440 Customer No. 0155090244 and they will co-ordinate a delivery.

Then contact the Booking officer John Kraefft 0405 370 872 to advise that we have requested a gas delivery.

Outside of ski season call ELGAS. Customer No. 0155090244

LOUNGE ROOM GAS FIRED HEATER – Refer to instructions in Section 11A