


# Bedroom & Games Room - Heater Controller

## Short Version Instructions :

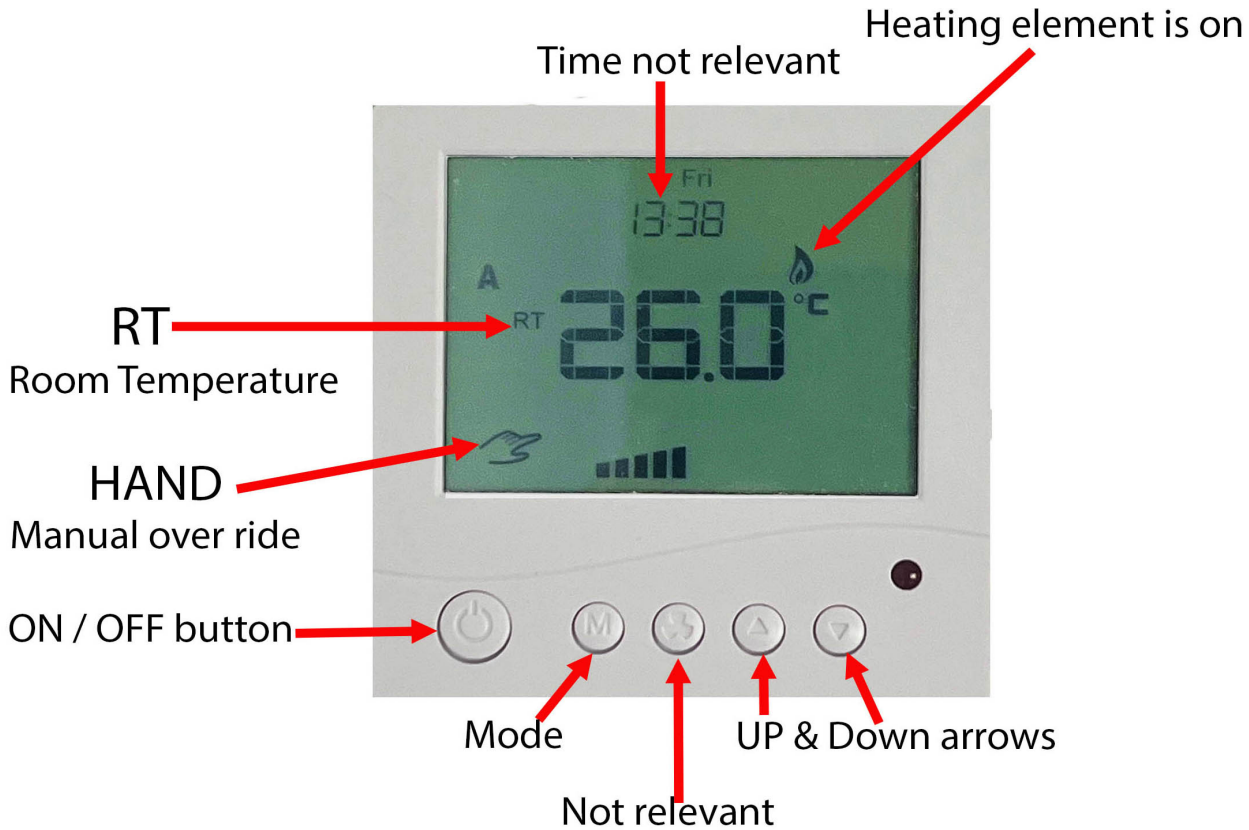

**Above image is what your controller should look like for heating to function.**

Note: Any setting changes in temperature will take time to be noticed, as heating is radiated from the ceiling slowly.

### **Heating is OFF –**

If only RT symbol displayed. Current room temperature will be shown ie: 26.0°C

### **Turn heating ON -**



Press ON/Off button once.



Hand “manual mode” needs to be displayed. If not, press  once only



Flame symbol indicates that the room is heating

### **Temperature Adjustment –**



Press UP arrow to increase temperature



Press DOWN arrow to decrease

**Note:** Temperature adjustment is in ½ degree increments. When the desired temperature setting is reached, stop and wait 3 seconds. The controller will set, and then display will show the current room temperature with a blue screen for 30 seconds – then it will return to default unlit green coloured screen.

\* If multiple buttons are pressed numerous times a *suitcase* may be displayed below the temp.

\* To RESET the controller: Press to UP Arrow for 3 seconds – the HAND symbol should return - indicating you’re in “Manual Mode”